



## Y006L Illuminated Table Top Magnifier

These instructions should be read carefully and left with the user of the product for future reference.

### BEFORE USE

Inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This unit must be used on a flat, stable surface.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use in a bathrooms or other wet or damp locations.
- Do not place the mains lead beneath a carpet or rug.
- Please ensure the unit is switched off and unplugged when not in use
- Do not use the unit for other than its intended use.
- Clean only with a slightly damp cloth. The unit must be switched off and be unplugged from the mains supply.
- Do not allow direct sunlight or strong light to shine through the lens. Risk of fire and burning
- Do not look directly through the lens at the sun or bright light. Risk of eye damage.
- Before changing the lamp make sure that the unit is switched off and disconnected from the mains.
- Do not leave this unit switched on when unattended.

### OPERATION AND FUNCTIONS

Position securely on a flat stable surface and extend the unit into the required position. Plug in and switch on. Clean only with a slightly damp cloth with the unit switched off. If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre.

If the mains plug needs to be replaced, proceed as follows: Fuse 5A


Connect the brown wire to the terminal labelled "L".  
Connect the blue wire to the terminal labelled "N".  
Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it is fully tightened

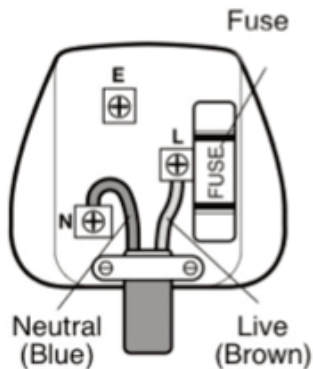

**Before changing the lamp make sure that the product is switched off and disconnected from the mains.**

To replace the lamp, proceed as follows;

- Remove the 5 screws and unclip the perspex cover (see fig. 1).
- Remove the lamp and replace with new lamp.
- Re-attach the perspex cover and re-insert the screws.

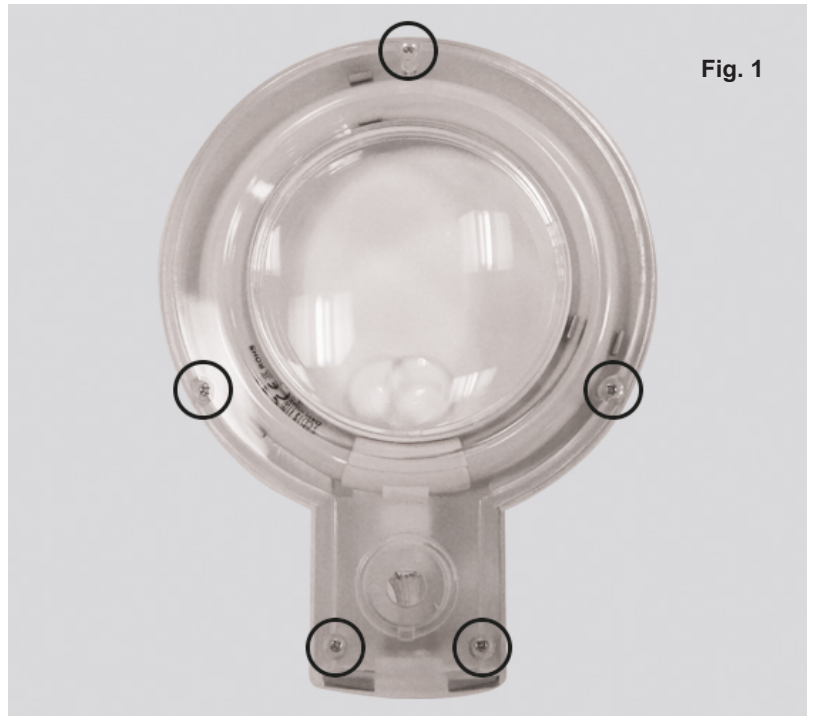

### DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user. When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

### TECHNICAL SPECIFICATION

230V @ 50Hz 11W

Lamp: T4 11W Daylight