



CD+G Karaoke System with 3.5" screen and Bluetooth Connectivity

**KAR122C (Pink/White)
KAR122D (Black/White)**

USER & SAFETY MANUAL

IMPORTANT

Owners and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

You must inspect the karaoke machine including the power supply for any signs of damage. If the product is damaged in any way, DO NOT USE IT, and contact your supplier immediately.

PRODUCT SAFETY

- Children should be supervised when using this unit.
- For indoor use only when using the power supply.
- Do not place the power lead beneath a carpet or rug.
- Do not use in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use the unit in the immediate surroundings of a bath, shower, swimming pool or similar damp or wet area.
- Use on a flat, level, stable surface.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not allow the power cord to become a trip hazard.
- When not in use the product should be switched off and the power supply disconnected from the mains supply.
- Do not leave the product unsupervised when switched on and connected to the mains supply.
- Do not use near sources of heat such as fires, stoves etc.
- When used with batteries do not expose the product to direct sunlight or other sources of heat.
- Periodically check the product and its power supply for damage.
- There are no other user serviceable products in this product.
- Do not obscure or block the ventilation holes. This can cause a risk of overheating and lead to damage of the product.
- Do not allow the product to be used at full volume for prolonged periods of time to protect the hearing of both children and adults.

PRODUCT USAGE

- The user should familiarise themselves by carefully reading these user instructions before use. Improper use can lead to damage that is not covered by the warranty.
- Only use the cleaning instructions recommended by the manufacturer.
- Use only with the power supply provided with the product.
- Always remove batteries when not in use.
- Do not use the product with power supply and batteries at the same time.
- Only use the power supply supplied with this product.

LASER INFORMATION

This product contains a semiconductor laser system inside the cabinet and is classified as a "CLASS 1 LASER PRODUCT". To prevent exposure to the laser beam, do not to open the enclosure.

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LÁSER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM.



This product contains a low power laser device.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRICSHOCK, DO NOT REMOVE COVER (OR BACK).NO USER-SERVICEABLE PARTS INSIDE. REFERSERVICING TO QUALIFIED SERVICE PERSONEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accomoanying the appliance.

This kit contains:

1 x CDG player with Bluetooth / USB/ Aux function


1 x microphone

1 x double CDG karaoke hits disc

1 x 12V PSU

1 x 3 phono to 3 phono A/V lead

LOCATION AND MEANING OF CONTROLS

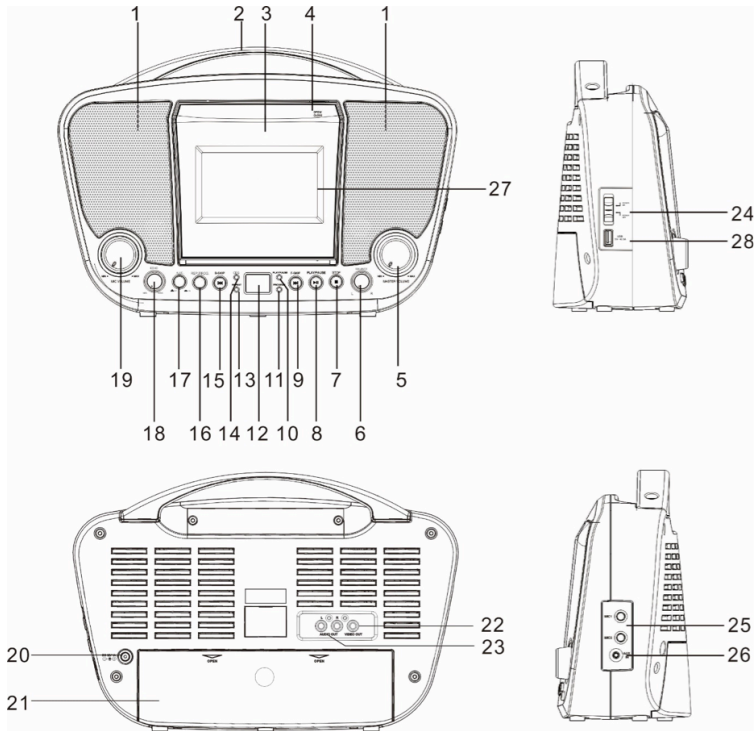

1	SPEAKERS	15	BACK SKIP BUTTON ◀◀
2	CARRYING HANDLE	16	REPEAT/PROGRAM BUTTON
3	CD DOOR	17	AVC ON/OFF
4	CD DOOR OPEN/CLOSE BUTTON	18	ECHO CONTROL
5	MIC VOLUME CONTROL	19	MASTER VOLUME CONTROL
6	BALANCE CONTROL	20	POWER IN DC SOCKET
7	STOP BUTTON PAIRING BUTTON ■	21	BATTERY DOOR
8	PLAY / PAUSE BUTTON USB/BT BUTTON ▶▶	22	VIDEO OUT JACK
9	FORWARD SKIP BUTTON ▶▶▶	23	AUDIO OUT JACK
10	PLAY/PAUSE INDICATOR	24	POWER SWITCH,
11	PROGRAM INDICATOR	25	MIC1,MIC2 JACKS
12	LED DISPLAY	26	AUX IN JACK
13	REPEAT INDICATOR	27	TFT LCD COLOR SCREEN
14	CD-G INDICATOR	28	USB JACK

HOW TO SET YOUR KARAOKE MACHINE UP

SOURCE SELECTION FUNCTIONS

1. Connect the power supply to the unit via the “DC Jack” on the rear of the unit and press the power on button on the front of the unit. Please remember to only use the power supply provided with the karaoke machine.
2. Connect the microphone to the unit using the microphone 1 input on the front of the unit. Before connecting the unit make sure the microphone and master volume controls are set to minimum. A second microphone (not supplied) can be connected to Microphone input 2.
3. Source selection can be made by pressing the mode button on the front of the unit. You can select from CDG (Disc), BT (Bluetooth), USB or Aux. Further information on how to work with these different source selections can be found further down and should be used in conjunction with this set up information.
4. After selecting your music source the microphone and master volume levels should be adjusted to the suitable levels. By altering these levels it should be possible to achieve the desired mix for your voice over the backing vocals and music.
5. Use the Echo control to add a reverb type effect you your voice and enhance the sound.
6. This unit also features an AVC control for use with special CD-G multiplex disc.

CD-CDG FUNCTION

Product plays standard CD's, karaoke CDG discs and CD-RW discs. Please note the quality of CD-RW discs cannot be guaranteed.

1. STOP ■ (#7) – Select this function to stop the CD/CDG from playing.
2. PLAY/PAUSE ►|| (#8)
 - 1) Press the play/pause button to play and pause the CD, the CD tracks will show on the LED display (#12).
3. FORWARD SKIP BUTTON ►►I (#9)
 - 1) Press FORWARD SKIP button to select the next track.
4. BACK SKIP BUTTON I◄◄ (#15)
 - 1) Press BACK SKIP button to select the previous track.
5. REPEAT/PROGRAM BUTTON (#16)

REPEAT FUNCTION

For repeat function to work, the disc must be in play mode.

- 1) Tap the replay/prog button (#16) once. The current playing track will then repeat and the repeat LED indicator (#13) will flash to indicate.
- 2) Tap the replay/prog button (#16) twice. The current disc will play through all of the tracks and then repeat them again. The repeat LED (#13) will be on.
- 3) Tap the replay/prog button (#16) three times. This will turn off the repeat function. The repeat LED (#13) will be off.

PROGRAM FUNCTION

- 1) This function allows music tracks to be played in a programmed sequence.
- 2) NOTE: Program function can only be set when the machine is in STOP mode.
- 3) Press the REPEAT/PROGRAM BUTTON (#16) once. Program Number 01 will display and PROGRAM INDICATOR will flash (#11).
- 4) Press the FORWARD SKIP BUTTON ►►I (#9) or BACK SKIP BUTTON I◄◄ (#15) to select the track to be programmed.
- 5) Press the REPEAT/PROGRAM BUTTON (#16) again to store the selection. Advance to 02 to prompt for the next input.
- 6) You may repeat steps #B to #C to program up to 20 tracks. As soon as you have entered the 20th track, the LED DISPLAY (#12) will show “FU”, indicating that program is full.

CONTINUED ON NEXT PAGE

PROGRAM FUNCTION (CONTINUED)

- 7) Press the PLAY button to complete and start playing the programmed sequence of tracks. Press STOP BUTTON (#7) to stop program play.
- 8) You may use the REPEAT function to repeatedly play a certain track (Repeat 1) or all tracks (Repeat All) in the Program Play Mode.
- 9) The CD player will stop when all the programmed tracks have been played through once. To repeat program play, press the PLAY/PAUSE BUTTON ►|| (#8).
- 10) To cancel program play, press the STOP BUTTON (#7) twice while program play is running or open the CD DOOR (#3) in stop mode.
- 11) Up to 20 tracks can be programmed.

BLUETOOTH FUNCTION

1. Press and hold the PLAY/PAUSE button (#8) to select a new mode.
2. Repeat the process until you reach Bluetooth mode. This will be indicated as the red LED light at the front the screen (#12) will flash "BT".
3. Simply select the device name MRENTERTAINER1 to connect to the karaoke machine from your BT compatible device. The BT indicator will stop flashing and an audio signal will signify successful pairing.
4. Once the karaoke machine is paired to your device, simply select your tracks on the device to play them. Please note this is audio only.

USB FUNCTION

1. Press and hold the PLAY/PAUSE button (#8) to select a new mode. Repeat the process until you reach USB mode.
2. Attach an external device including MP3 files as USB stick to the USB Jack (#28). The tracklist will then appear on the internal screen (#27).
3. Press the FORWARD SKIP BUTTON ►►I (#9) or BACK SKIP BUTTON I◄◄ (#15) to select the intended track, and then PLAY/PAUSE button (#8) to start playback. Please note MP3 is audio only.




AUX IN FUNCTION

1. Connect an external media player, for example IPOD/MP3 player/laptop to the Aux in socket (#26) on the karaoke player by using a 3.5mm jack to 3.5mm jack audio cable (not supplied).
2. Once the external player is connected to the player, select the preferred track from the external player and it will automatically play through the internal karaoke player speaker.

AUDIO/VIDEO OUTPUT

1. When playing a CDG disc, you can use the AV cable to connect your external display, such as a television. This will display video output, and audio output from the karaoke player.
2. When playing a CD disc, the karaoke player will only provide audio output.
3. When connected through Bluetooth, the external display will provide audio output only.

SPECIFICATIONS

Output Power	1.5W + 1.5W (RMS)
Speakers	2 x 3" 8Ω
Aux-in Socket	3.5mm
Microphone Input	600Ω Impedance with 6.3mm Jack
Microphone	1 x Dynamic Microphone
Power Source	AC Adaptor (Supplied)
Input	AC 230V~50Hz
Output	DC 12V  1A  
Battery	8 x C (Not Supplied)

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Unit is ON but there is low or no volume	The master volume control has been turned all the way down.	Turn the master volume control to a higher output.
CD player of Karaoke System does not work normally or the "No" appears on the LED DISPLAY.	Disc is inserted upside down.	Insert disc correctly.
	Disc is dirty.	Wipe it clean with soft cloth.
	Disc is scratched.	Use a new disc.
	Disc is warped.	Use a new disc.
	A non-standard disc is inserted.	Only use compatible discs mentioned in this manual.
	Lens is dirty.	Clean the optical pickup with a CD lens cleaner.
	Moisture has condensed inside the CD deck.	Wait about 20 to 30 minutes to let it dry out.
	Karaoke system needs to be reset.	Disconnect the machine from power source for 30 seconds.
No sound - If audio is going through TV/ home stereo	Source Selection on your TV/home stereo is not set properly.	Select AV INPUT as the source for your TV/home stereo.
	Improper connection to stereo system or PA.	Follow directions on 'Audio/Video Output' section for connecting to a home stereo system.
No song lyrics appear on the TV screen (CDG Mode Only)	Video cable is not connected properly to the TV.	Connect the video cable to the VIDEO OUT of the unit and to the TV's Video In jack.
	Source selector on TV is not set to VIDEO or A/V IN.	Use your TV Remote to select VIDEO or A/V input.
	TV does not have video line input.	Connect from VIDEO OUT of the unit to a RF modulator and then to the TV cable input.
	A CD+G disc is loaded but the CDG indicator is not lit.	Check the disc to be sure it is a CD+G. Check disc to ensure it is clean.
No image on TV screen	TV input is not properly set.	Set TV input to correct A/V input that is connected to the unit.
Cannot sing through the mic	Improper MIC volume setting.	Adjust MIC and MASTER VOLUME CONTROLS to appropriate levels.
	MIC is off.	Turn on MIC with the ON/OFF switch located on the microphone.
	MIC is not properly plugged in.	Insert the mic plug fully into either MIC 1 or MIC 2 JACK of the unit properly.

CLEANING AND CARE

Before cleaning the machine it must be switched off and disconnected from its power supply. Only clean with a slightly damp clean cloth. Dust can be removed from grills and vents using a dry paint brush or similar.

SERVICE WARRANTY

- Mr. Entertainer guarantees the product free from defects in materials and workmanship for a period of twelve months.
- The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.
- Our guarantee is administered by our retailers.
- If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Mr. Entertainer, only your retailer can arrange a replacement.
- If your product fails within the guarantee period, and needs to be repaired or replaced, you must contact the retailer from whom you bought it.
- The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.
- If you have just received your product and require technical help in using it, please call our Help Desk on (0845) 459 4816
- If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union)



This symbol on the product, the battery or on the packaging indicates that the product and the battery may not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these products and batteries are disposed of

correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

Electrovision Ltd
Lancots Lane, Sutton,
St. Helens, Merseyside.
WA9 3EX

Website: www.electrovision.co.uk