



A145HA | A145HB

## Cloverleaf to 3 Pin Plug Extension

### Product Manual

**IMPORTANT**

Installer and Users please note: These instructions should be read carefully before use and this document constitutes part of the product which should be kept safely by the user alongside the product.

**BEFORE USE**

You must inspect the cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

**PRODUCT SAFETY**

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children without supervision.
- For indoor use only.
- Do not use in bathrooms, wet rooms or other damp locations.
- Do not place the lead beneath a carpet or rug.
- Do not use the product for other than its intended use.
- Check the product before use for damage. If any damage is detected stop using it immediately and consult your supplier.

**GENERAL SAFETY REQUIREMENTS**

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises (and buildings such as village halls) the wiring must be inspected at least once every 5 years. It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

**HOW TO USE**

1. Connect the 'Cloverleaf' plug into your device
2. Connect the 3 Pin mains plug into a mains socket

**SERVICE WARRANTY**

Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months. Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. Our guarantee is administered by our retailers. If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement. If your product fails within the guarantee period, firstly read the "fault finding" section of this manual, because temperature and weather conditions can affect the performance of certain products. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it. If you have just received your product and require technical help using it, please call our Help Desk on (0845) 459 4816. If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816.

Electrovision Ltd.  
Lancots Lane, Sutton  
St. Helens, Merseyside  
WA9 3EX  
[www.Electrovision.com](http://www.Electrovision.com)