



# 6 CHANNEL INTERPHONE

Cat. No. P666 (T1.6M)

## OPERATING INSTRUCTIONS



### General

- Handset can be desk top or wall mountable.
- Private communication.
- In a system with two or more T16M's more than one conversation may take place at any time.
- All master communication only.
- Only one RP.1215N power supply is required for each complete system and should be located near the middle of the cable run.
- Electronic switching systems guarantee foolproof performance.

### Operation

#### TO CALL!

Simply lift the handset and depress the station button required 1 - 6.

On the line being engaged a tone is emitted.

### Location

Handset can either be used on a desk top or wall mounted. The power supply unit should be located as close to the middle of the cable run as possible for maximum efficiency.


### Wiring

Use colour coded 0.5mm<sup>2</sup> single strand multicord cable. The cable requirements are number of station + 2. Therefore on six handsets being used total cable requirement = 8 core cable. See wiring diagram.

Maximum cable run = 200 metres @ 15 volts. Multicore cable terminated to the terminal box supplied. The terminal boxes should be firmly fixed to wall or skirting boards.

### Power supply

RP.1215 N.

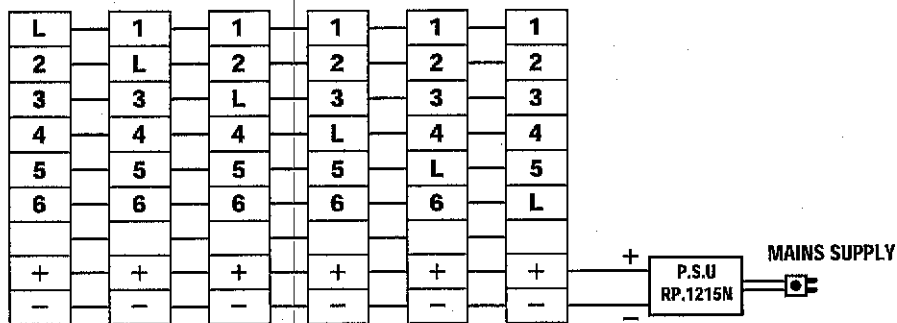

WIRING INSTALLATION 6X T1.6M