



E304DA, Digital Timer Plug-In Socket

Please retain for future reference

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference. You must inspect the product for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

INTRODUCTION:

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems, please contact our Customer Services on 01928 581 284.

IMPORTANT SAFETY INFORMATION:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Unplug this appliance and only clean with a dry cloth.

Cleaning and user maintenance shall not be made by children without supervision.

For indoor use only.

Do not use in bathrooms, or in wet or damp locations.

OPERATION

This household plug-in type timer switch socket can control the connected appliances to power on or off at a pre-set time. It has rechargeable battery inside to save settings. If LCD is blank, please plug the product in a mains socket to recharge for about 5 - 10 minutes before operation.

1. **Initial Setup** Use a pointed tool (such as a paperclip) to press the RESET button to clear all the settings. LCD will show as Figure 1, then change to clock mode as in Figure 2.



Figure 1

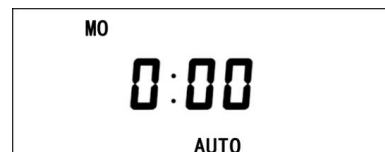


Figure 2

2. Set Clock

2.1. Press CLOCK to enter clock mode.

2.2. Press and hold CLOCK button and press WEEK button to set day, then press HOUR button to set hour and press MINUTE button to set minute.

2.3. Press CLOCK and TIMER buttons together to choose 12 or 24 hour mode.

2.4. Press CLOCK and ON/AUTO/OFF to set daylight saving time (DST), LCD will show SUMMER.

3. Set Timing

3.1. Unplug the timer from mains power then press TIMER to enter timing set mode.

3.2. Press WEEK button to choose cycle in below order: Single day: MO > TU > WE > TH > FR > SA > SU

Every Day: MO-TU-WE-TH-FR-SA-SU

Work Day: MO-TU-WE-TH-FR

Weekend: SA-SU

Except Sunday: MO-TU-WE-TH-FR-SA

Other Days: MO-WE-FR > TU-TH-SA > MO-TU-WE > TH-FR-SA > MO-WE-FR-SU

3.3. Press HOUR button to set hour, press MINUTE to set minute.

3.4. Press RES/RCL button to delete or restore the latest setting.

3.5. Continue pressing TIMER button to move to the next set of on/off times (set by repeating steps 3.2-3.4)

3.6. If no button is pressed in 30 seconds, the timer will exit setting mode.

4. Random Setting

4.1. Press RANDOM button, LCD will display RANDOM indicating the random switch is in effect (between 6:00PM and 6:00AM).

4.2. Press RANDOM button again to cancel the random setting.

5. Manual Operation

5.1. Press ON/AUTO/OFF button to choose between ON > AUTO > OFF Auto = Timer control On = Power on Off = Power off

5.2. After the timing programs have been set, choose AUTO mode and plug in the appliance, it will switch the appliance on and off according to the set times.

6. Specification Accuracy = +/- 1minute/month Battery = 1.2VDC NIMH Battery Max Load = 13A resistive, 2A Inductive. Supply = 240VAC, 50Hz

PAT TESTING

When used in a workplace, this product should be safety-tested yearly by a qualified electrician (PAT Tested). We recommend that it is PAT tested regularly when used in a domestic environment.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

Service Warranty

Electrovision guarantees the product free from defects in materials and workmanship for a period of 12 months. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. Our guarantee is administered by our retailers. If your product arrives damaged, you must contact the retailer from whom you bought it. The retailers contact details will be on the invoice that arrived with the product, or on the email you received when you placed the order. Do not contact Electrovision, only your retailer can arrange a replacement. If your product fails within the guarantee period, and needs to be repaired or replaced, you must contact the retailer from whom you bought it. If you have just received your product and require technical help in using it, please call our help desk on (0845) 459 4816 If you have any other technical queries about the product, please call our help desk on (0845) 459 4816

Electrovision Ltd.,
Lancots Lane,
Sutton, St. Helens, Merseyside.
WA9 3EX

Website: www.electrovision.co.uk