



E301NA T1 60W

Clip On Light Head

Product Manual

IMPORTANT

Installer and Users please note: These instructions should be read carefully before use and this document constitutes part of the product which should be kept safely by the user alongside the product.

BEFORE USE

You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- For indoor use only.
- Do not use in bathrooms, wet rooms or other damp locations.
- Do not place the lead beneath a carpet or rug.
- Do not use the appliance for other than its intended use.
- Check the product before use for damage. If any damage is detected stop using it immediately and consult your supplier.
- There are no user serviceable parts in this product
- Do not allow equipment to hang unsupported from the socket

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises (and buildings such as village halls) the wiring must be inspected at least once every 5 years. It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

HOW TO USE

1. Uncoil the cable and position it carefully to avoid accidents
2. Fit a light bulb into the bulb socket (60W Max)
3. Clip the device into the desired position
4. Connect the plug to a mains power socket
5. Operate the light using the slide switch in the pendant

SERVICE WARRANTY

- Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months.
- Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.
- The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.
- Our guarantee is administered by our retailers.
- If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement.
- If your product fails within the guarantee period you must contact the retailer from whom you bought it.
- If you have just received your product and require technical help using it, please call our Help Desk on (0845) 459 4816
- If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816

Electrovision Ltd.
Lancots Lane, Sutton
St. Helens, Merseyside
WA9 3EX
www.Electrovision.co.uk