

E370B

2 Gang Floor Socket 13A

Product Manual

IMPORTANT

Installer and Users please note: These instructions should be read carefully before use and this document constitutes part of the product which should be kept safely by the user alongside the product.

BEFORE USE

You must inspect the device for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- Children shall not play with the device.
- Cleaning and user maintenance shall not be made by children without supervision.
- For indoor use only.
- Do not use the appliance for other than its intended use.
- Check the product before use for damage. If any damage is detected stop using it immediately and consult your supplier.


GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy. For office and retail premises (and buildings such as village halls) the wiring must be inspected at least once every 5 years. It is recommended that all buildings be fitted with smoke alarms (it is mandatory for new buildings).

GENERAL INSTALLATION INSTRUCTIONS

1. Ensure power is completely disconnected before attempting installation.
2. If using the new product to replace an old one, note the cable connections and wire up the new product in the same way as the old one, with Earthing as stated in these instructions.
3. Ensure the mounting box (metal or plastic) for either flush or surface mounting is the appropriate size for the product.
4. Route the cable through the most suitable entry point of the mounting box. If a metal box is used, a protective cable grommet should be used.
5. Cables should be prepared so a sufficient conductor length reaches the terminal. Strip the ends of the individual conductors so that an adequate length enters the terminals.
6. Carefully arrange the wiring to lie along the edges of the product or box, keeping the central area clear.
7. To assist with the correct installation, please consult the wiring diagram in these instructions.
8. When connecting the new accessory, ensure that only the bare end of the wire enters the terminal and no bare wires are visible. Always tighten the terminal screws securely, but do not overtighten. An earth connection should always be made between the mounting box earth terminal and the accessory earth terminal, where fitted. If this earth wire is bare, it is essential that it is sheathed with a length of green/yellow sleeving.
9. Carefully position the accessory into the wall box, ensuring that no wires are trapped between the plate and the wall. Do not over tighten the screws. (Fit screw covers/clip on front plate as appropriate).
10. Once work has been completed correctly, replace the fuse for the circuit, switch the power back on and test. The product is now ready for use.

WIRING DIAGRAM

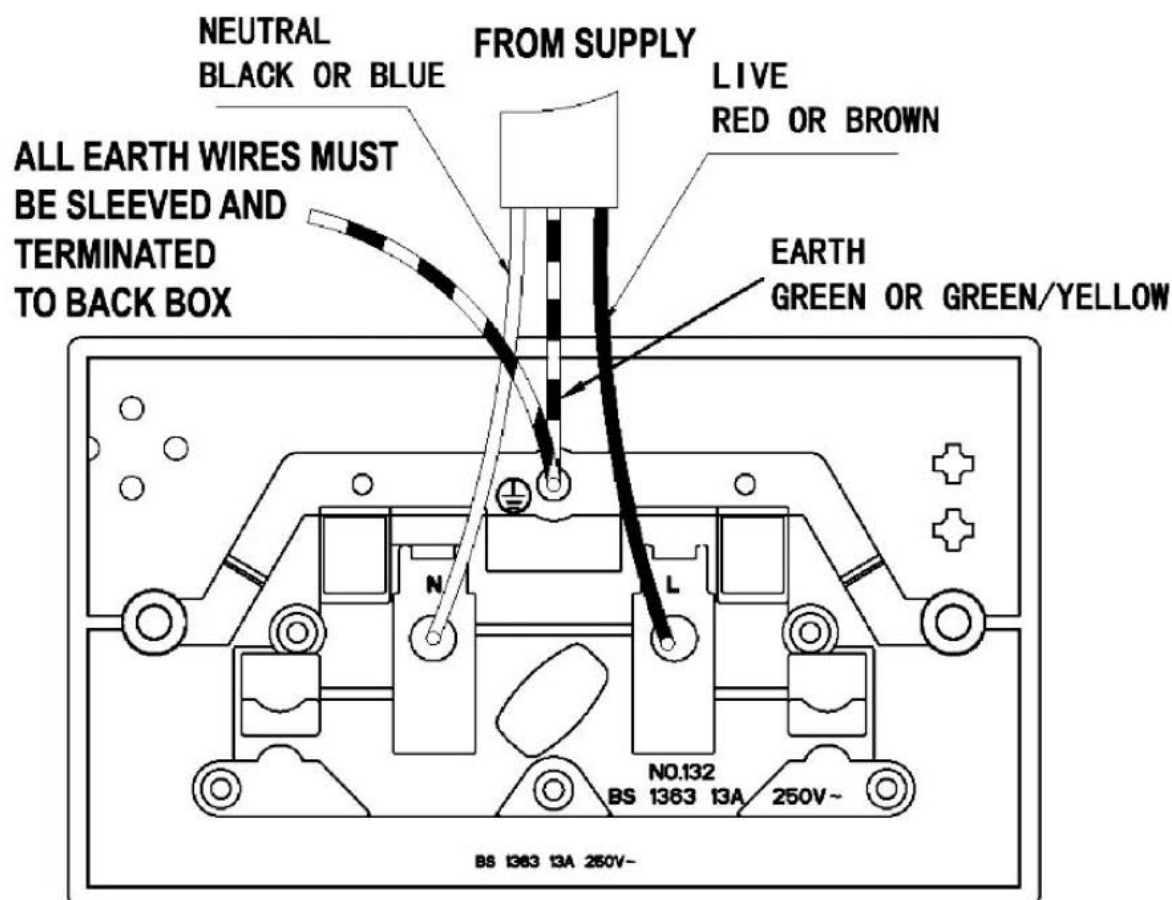

NOTE: EXACT POSITIONS OF LIVE, NEUTRAL AND EARTH TERMINALS MAY VARY! ENSURE THE CORRECT CABLE IS CONNECTED TO THE CORRECT TERMINAL BY CHECKING THE LETTER NOTATION ON THE TERMINAL (E, N, L)

SERVICE WARRANTY

- Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months.
- Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.
- The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.
- Our guarantee is administered by our retailers.
- If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement.
- If your product fails within the guarantee period, firstly read the "fault finding" section of this manual, because temperature and weather conditions can affect the performance of certain products. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it.
- If you have just received your product and require technical help using it, please call our Help Desk on (0845) 459 4816
- If you have any other technical queries about the product, please call our Help Desk on (0845) 459 4816

Electrovision Ltd.
Lancots Lane, Sutton
St. Helens, Merseyside
WA9 3EX

www.Electrovision.co.uk