



User Manual

Please retain for future reference

IMPORTANT


Users please note:

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems, please contact our Customer Services on (0845) 459 4816.

PRODUCT SAFETY

- This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This is not a toy.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always switch off and remove the batteries when not in use and before cleaning
- Do not use the appliance for anything other than its intended use.

OPERATING INSTRUCTIONS

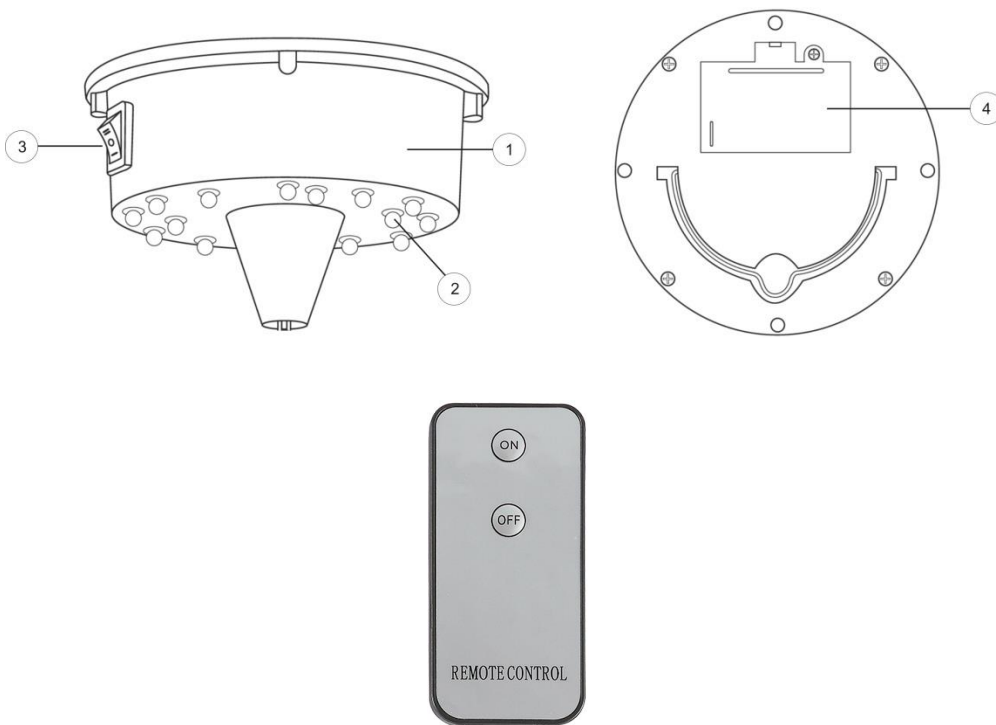

Product description:

1. Motor
2. LEDs
3. On/Off/Sound responsive switch (I=On, O=Off, II = Sound responsive mode)
4. Battery compartment
 - Insert 2x AA batteries into the battery compartment on the back of the motor and replace the compartment cover.
 - Select one function (I=On, II = Sound responsive mode, like strobe)
 - Use remote control the light on or off.

CLEANING AND MAINTENANCE.

1. Ensure the unit is powered off and batteries are removed before cleaning.
2. The unit should be cleaned gently with a clean dry brush or cloth. Do not use water to clean the unit.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection systems for appliances and disposal is free of charge to the end user. When replacing an existing appliance with a similar new appliance, your retailer may take the old appliance for disposal.

SERVICE WARRANTY

Imported by Electrovision Ltd. Electrovision guarantees the product free from defects in materials and workmanship for a period of 1 year. Should this unit be used differently than instructed or any attempts are made to modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our help desk on (0845) 459 4816.

Electrovision Ltd.

Lancots Lane, Sutton, St. Helens, Merseyside, **WA9 3EX**

www.Electrovision.co.uk

