



GH362

Gazebo Weights



User Manual

Please retain for future reference

IMPORTANT

Installer and users please note:


Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data.

PRODUCT SAFETY

- **WARNING:** Choking hazard. Small parts. Keep away from children and pets
- Children shall not play with the weights
- Cleaning and maintenance shall not be made by children without supervision
- Do not use weights for anything other than their intended use
- The weights will be heavy when filled, take care when handling
- Beware of pinch, crush and shear points when fixing the weights, exercise caution
- Do not overtighten the fixing screws, they can be broken in this way
- Every effort has been taken to smooth any rough edges, however if any rough edges remain, these can be removed by hand using a fine grade sandpaper (not supplied)

USAGE INSTRUCTIONS

1. Unclip the filling hole cover and fill each weight with either sand or water. Replace the cover.
Note: Do not fill with other materials, such as small stones or other liquids.
2. Position 2 halves of the weights on either side of the gazebo leg and push the pieces together. The filling holes must be on the top of the weights.
3. Use the screws to secure both pieces together.
Note: do not overtighten the screws, they can break.

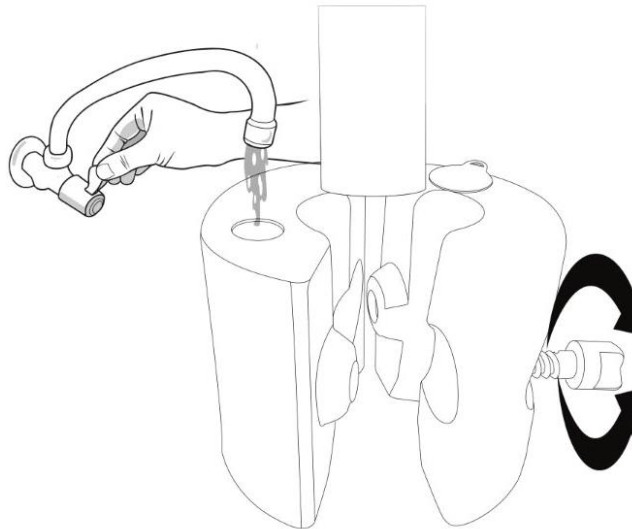

CLEANING INSTRUCTIONS

The weights should be cleaned periodically with warm water and mild detergent. Do not use harsh or abrasive cleaning products.

STORAGE INSTRUCTIONS

Before storing, empty the weights of material and any water and allow to dry completely

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of 1 year. Should this unit be used under conditions other than those recommended, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our help desk on (0845) 459 4816.

Electrovision Ltd. Lancots Lane, Sutton, St. Helens, Merseyside, WA9 3EX

www.Electrovision.co.uk