



GH370

Walk-In Greenhouse



User Manual

Please retain for future reference

 
 
 
 
 


 
 
 

**IMPORTANT
Installer and users please note:**

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data.

PRODUCT SAFETY

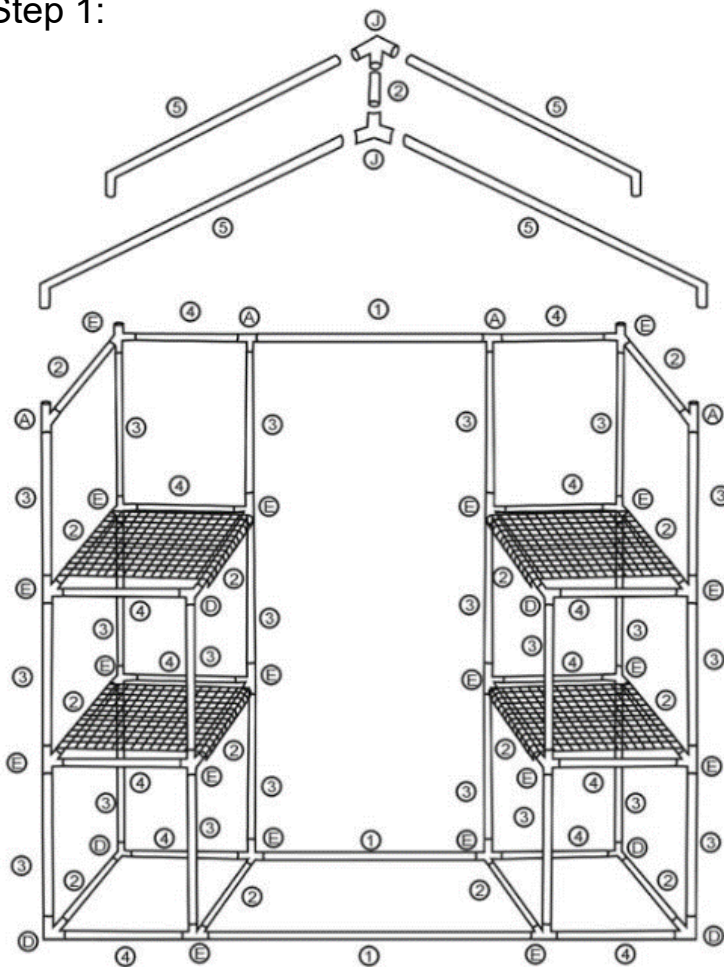
- **WARNING:** plastic bags can be dangerous. To avoid danger of suffocation, keep the plastic cover away from babies and children.
- Children shall not play with the greenhouse.
- Cleaning and maintenance shall not be made by children without supervision.
- Do not use the greenhouse for anything other than its intended use.

PARTS LIST

Part	Image	QTY
1		3
2		15
3		22
4		14
5		4
A		5
B		4
C		1
D		6
E		20
F		2

ASSEMBLY INSTRUCTIONS

Step 1:



Step 2:

Once assembled as above, slide the cover (C) over the framework to complete the greenhouse

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of 1 year. Should this unit be used under conditions other than those recommended, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our help desk on (0845) 459 4816.

Electrovision Ltd. Lancots Lane, Sutton, St. Helens, Merseyside, **WA9 3EX**

www.Electrovision.co.uk