




Kitchen Gap Cover

User Manual

Please retain for future reference

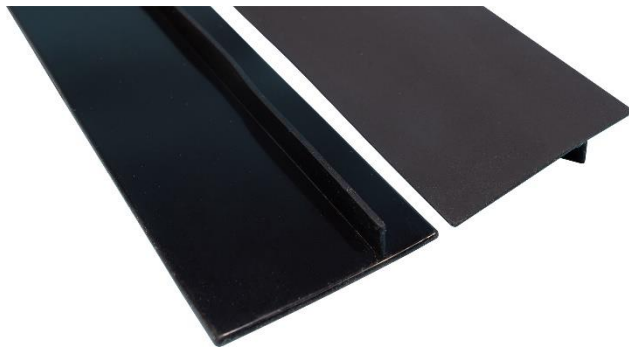

GH519B (Black)



GH519W (White)

PRODUCT SAFETY

- This is not a toy; children shall not play with the product
- If cutting is required, this can produce small parts, take care around babies and young children
- Do not use the product for anything other than its intended use

INSTRUCTIONS

- Place the cover over the gap between the work surface and the appliance, allow the notch to fall fully into the gap
- If required, cut to size using a sharp blade
- The covers can also be secured using a kitchen grade silicone sealant: run a thin bead along either side of the notch and press the cover firmly in place. Carefully roll out any bumps and clean any excess silicone that squeezes out the sides.

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of 1 year. Should this product be used under conditions other than those recommended, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our help desk on (0845) 459 4816.

Electrovision Ltd. Lancots Lane, Sutton, St. Helens, Merseyside, **WA9 3EX**

www.Electrovision.co.uk