



# LED Remote Control Push Lights (3 Pack)



**L104A**

**Product Manual**

## TECHNICAL DATA

Voltage: 1.5V AA/LR6

Power: 0.06W/LED

## INSTALLATION OF BATTERIES

### Lamps

Use 3 x AA (batteries not supplied)

Open the back of the light with a coin, turn the cover anti-clockwise to open it

Insert 3 x AA batteries, take note to the polarities indicated

Replace cover, ensuring the 2 pins slot into the 3 holes on the back of the lamp. Turn cover clockwise, and secure with a coin

NB: If the batteries need to be replaced after mounting the lamp, turn the lamp anti-clockwise to open it.



 
### Remote

Use 3 x AAA (batteries not supplied)

Slide the battery cover down to open the battery compartment

Insert 2 x AA batteries, take note to the polarities indicated

Replace cover, closing the battery compartment

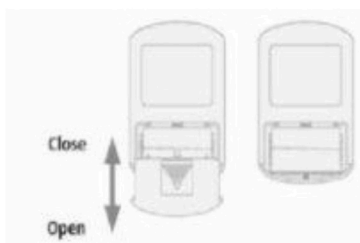


## OPERATION

Once batteries are fitted, the lamp and remote control are ready to use. The lamp can be switched on by the remote control by pressing the ON button. The lamp can also be switched on by pressing the centre of the device.

To turn off the lamp via the remote control, simply press the OFF button. Likewise, pressing the centre of the lamp will switch it off.

To dim the lamp, press the LOW button once.

 If you require the lamp on for a short period of time, press the 30 MIN button, and this will automatically switch the lamps off after 30 minutes.

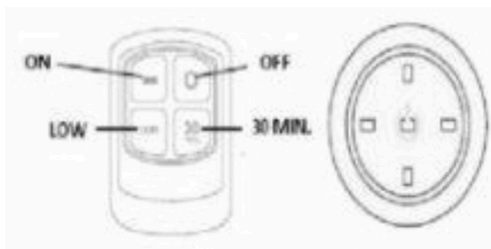


## TO PROGRAM MULTIPLE LAMPS

The lamps are individually coded  
One remote control works for all the lamps in a set  
Multiple sets can be used in the same location without interference  
You can program the lamps, and one remote can control up to 24 lamps.

### ***To program the lamps for one remote control***

1. Ensure the batteries are in the remote control
2. Place 2 batteries in the lamp that you wish to connect, then keep the centre of the lamp pressed down while you insert the 3rd
3. Within 10 seconds, press both ON and OFF buttons on the remote control, then release

 *Repeat steps 1-3 to add more lamps*

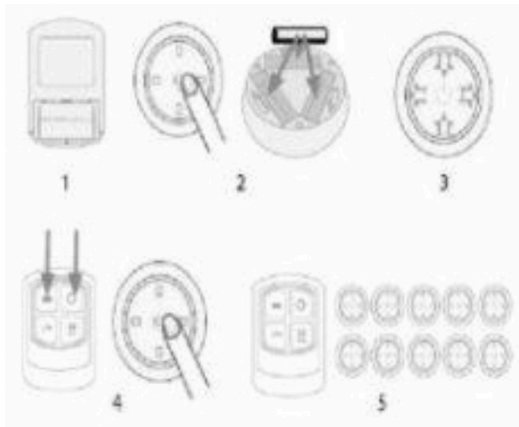

## ENVIRONMENTAL RESPONSIBILITIES

 
### Meaning of crossed-out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dups, hazardous substances can leak into the groundwater and get into the food chain damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge

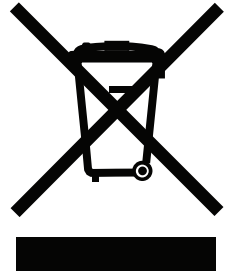

## SERVICE WARRANTY

- Eagle guarantees the product free from defects in materials and workmanship for a period of twelve months.
- Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.
- The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.
- Our guarantee is administered by our retailers.
- If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Eagle, only your retailer can arrange a replacement.
- If your product fails within the guarantee period, firstly read the "fault finding" section of this manual, because temperature and weather conditions can affect the performance of certain products. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order.
- If you have just received your product and require technical help in using it, please call our Help Desk on 0845 459 4816.
- If you have any other technical queries about the product, please call our Help Desk on 0845 459 4816.

Electrovision Ltd.  
Lancots Lane, Sutton,  
St. Helens, Merseyside,  
WA9 3EX

[www.electrovision.co.uk](http://www.electrovision.co.uk)