

CHEETAH®

G017KH Traffic Light Party Light

Instruction Manual



Thank you for buying this Cheetah Leisure Traffic Light Party Light. We hope it brings you much enjoyment.

Please carefully read the following instructions and warnings and retain this manual for future reference.

Firstly, carefully inspect the product for signs of damage. If any are detected, please do not use and refer back to your supplier.

CAUTIONS AND WARNINGS

- This item is not a toy. Children must not play with the item.
- Children over 12 may use this product but only with adult supervision.
- Do not use with USB outputs from Computers, laptops, and similar devices.
- Only use the USB lead with approved 5V USB power adaptors.
- For indoor use only.
- Only use this product on a firm, flat, stable surface
- Remove batteries when not in use or when batteries are exhausted.

INSTALLATION AND USE

Using a small cross bladed screwdriver open-up the battery compartment on the bottom of the base of the stand. Carefully insert 3 x AA batteries (not supplied) or alternatively connect the USB lead provided to connect to an approved 4.5V power supply. **Make sure any batteries are removed from the product before using the USB option.**

DISPOSAL AND RECYCLING

You must not dispose of this product with domestic household waste. Most local authorities have specific collection system for electronic items and disposal is free of charge to the end-user.

MAINTENANCE

- Store in a dry clean space when not in use.
- Disconnect from the mains supply in when not in use