




GH381 – Garden Arch with Gate

Instruction Sheet

Parts & Assembly (Parts might differ from your model but assembly is the same)

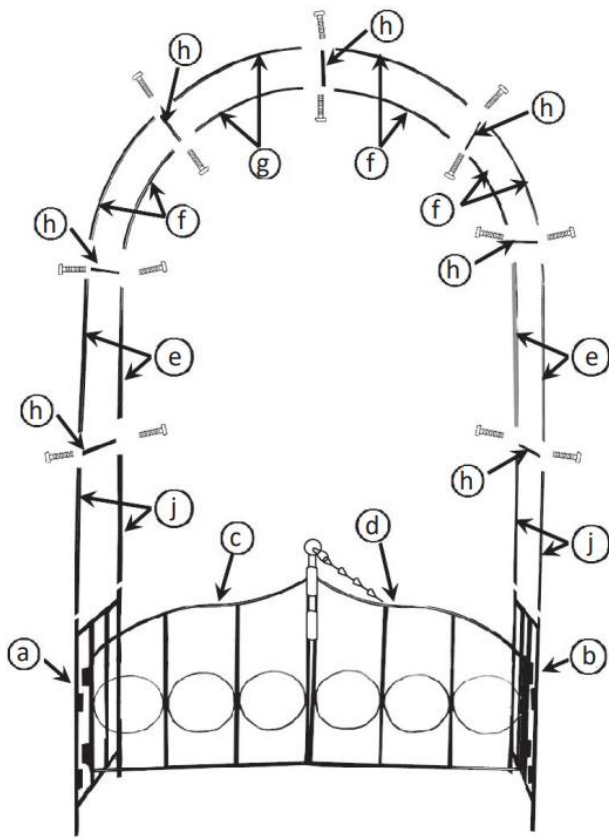

	a	1
	b	1
	c	1
	d	1
	e	4
	f	6
	g	2
	h	7
	i	14
	j	4

To fix into place and installed push the bottom 10cm of the Arch into the ground. We would suggest for permanent installation the arch be anchored using stakes or hooks (not supplied).

If you are to hang displays (for example Wind Spinners, Plants, chimes) please distribute the weight evenly and only upto 350grams per piece.

SERVICE WARRANTY:

St Helens Home and Garden guarantees the product free from defects in materials and workmanship for a period of twelve months..

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. Our guarantee is administered by our retailers. If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Electrovision Limited, only your retailer can arrange a replacement. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. If you have just received your product and require technical help in using it, please call our Help Desk on 0845 459 4816

If you have any other technical queries about the product, please call our Help Desk on 0845 459 4816

Electrovision Ltd.
Lancots Lane, Sutton,
St. Helens
Merseyside
WA9 3EX
www.electrovision.co.uk