



Wired Intercom

P152DA



Instruction Manual

INTRODUCTION:



Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning technical problems, please contact our Customer Services on 01928 581 284

IMPORTANT SAFETY INFORMATION:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Place the appliance on a firm flat surface. Do not place on soft surfaces.
- For Indoor Use Only
- Do not use in bathrooms, or in wet or damp locations.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not place the lead beneath a carpet or rug.
- Do not insert any object into the appliance through the grilles. This may damage the appliance or result in overheating or electric shock.


TECHNICAL SPECIFICATION

Model	P152DA
Power Supply	6V DC

HOW TO USE

Wiring

Connect the transmission wires as shown in the wiring diagram below. Ensure the wires connect corresponding terminals.

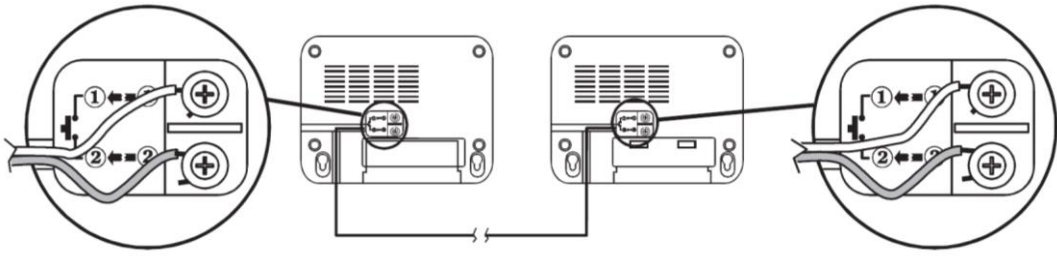

Battery Installation

1. Open the battery cover on the master station
2. Insert 4x 'C' batteries into the battery compartment
3. Close the battery cover

Operation

Call from Master Station

1. Slide the function switch to ON
2. Press CALL/TALK on the master station to make a call
3. Hold CALL/TALK to talk, release to listen
4. Slide the function button to OFF when finished, to put the unit in standby mode

Call from Slave Station

1. Press CALL on the slave station to make a call
2. Talk into the device, you do not need to press any buttons


MAINTENANCE

Before cleaning, turn the appliance off, and disconnect from the power supply. The appliance may then be cleaned using a damp cloth with a drop of washing-up liquid to remove any dust or dirt from the case. Do not use stronger detergents or solvents as these may damage the finish. Using a dry 1" (25mm) paint-brush, remove any dust from the grilles.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection systems for appliances and disposal is free of charge to the end-user. When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

ENVIRONMENTAL RESPONSIBILITIES:

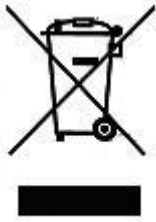

Meaning of crossed –out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local council for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposal free of charge

SERVICE WARRANTY:

Electrovision Ltd. guarantees the product free from defects in materials and workmanship for a period of twelve months. Should this appliance be operated under conditions other than those recommended, at voltages other than the voltage indicated on the appliance, or any attempts made to service or modify the appliance, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. Our guarantee is administered by our retailers. If your product arrives damaged, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. Do not contact Electrovision Limited, only your retailer can arrange a replacement. If your product fails within the guarantee period, firstly read the "fault finding" section of this manual, because temperature and weather conditions can affect the performance of certain products. If the product needs to be repaired or replaced, you must contact the retailer from whom you bought it. The retailer's contact details will be on the invoice that arrived with the product, or on the e-mail you received when you placed the order. If you have just received your product and require technical help in using it, please call our Help Desk on 01928 581 284

If you have any other technical queries about the product, please call our Help Desk on 01928 581 284

Electrovision Ltd.
Lancots Lane, Sutton,
St. Helens
Merseyside
WA9 3EX

www.Electrovision.com