



Soldering Iron

Y061KH (25W) / Y061KJ (30W) /
Y061KD (40W) / Y061KE (80W)

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

Inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY


- Keep away from children.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- Do not use in close proximity to gas appliances
- Do not cover when in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the product in locations where paint, petrol or other flammable liquids or gases are used or stored. Risk of fire and explosion.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool. Risk of Electric Shock.
- Always use a safety stand to allow the product to warm up/cool down. Risk of fire.
- This unit is for indoor use only.
- Do not touch the iron tip and shaft. Hold by the plastic handle only. Very hot. Risk of burning.
- This product generates heat up to 480 Deg C. Improper use may lead to a risk of fire and burning
- Do not leave this product unattended when switched on.
- Only use this product in well ventilated areas. Soldering produces fumes. Risk of breathing issues.
- Disconnect from the mains when not being used.
- There are no user serviceable parts in this unit other than the tip.
- Inspect the product for damage before use.

OPERATION AND FUNCTIONS

After following the safety instructions above plug the unit in and switch the power on making sure the iron is in a safe position to do so. The iron will take about 60 seconds to warm up to full temperature. Always use with a safety stand and if used with a cleaning sponge make sure this is kept wet. If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre.

If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green/yellow to the terminal labelled "E"
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened

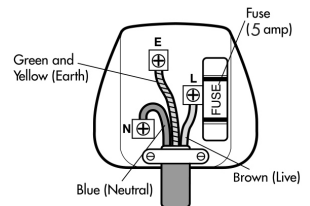

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user. When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Y061KH	230V @ 50Hz 25W
Y061KJ	230V @ 50Hz 30W
Y061KD	230V @ 50Hz 40W
Y061KE	230V @ 50Hz 80W

Electrovision Ltd.,
Lancots Lane, Sutton, St Helens,
Merseyside WA9 3EX
www.electrovision.co.uk