



Tubular Heaters



EH1711 45W **EH1713** 80W

EH1715 135W

EH1717

180W

User ManualPlease Retain for Future Reference

This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or moved on then the manual must be included.

PRODUCT SAFETY

Please read these instructions carefully before use.

This product and its mains lead must be checked before use for any signs of damage. If any is detected then do not use and contact your supplier.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- For indoor use only.
- Do not place the mains lead beneath a carpet or rug.
- Do not use this appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Please ensure the appliance is switched off and unplugged when not in use.
- Do not use the appliance for other than its intended use.
- Do no insert any object into the appliance through the grilles. This may damage the product or result in overheating or electric shock.
- Periodically check this product and its mains lead for any signs of damage. If any damage is detected stop using it immediately and consult your supplier.
- Only use this product on a flat and Horizontal surface (Wall). Do not mount at an angle or on the ceiling or on the floor.
- Do not leave this product unattended when in use.
- There are no user serviceable parts in this product
- Do not move or knock this product while in use.
- Do not obstruct the air flow around this item. There must be at least 150mm air gap around the unit at all time.
- It is recommended that this unit is used with its safety grill
- Do Not Cover
- Do not use in areas with high concentrations of dust or fibre particles.


PRODUCT SAFETY (CONTINUED)

- This item gets very hot. Do not touch. Keep Children and Pets away
- Do not submerge or allow the unit to become submerged
- Do not mount this unit close to any combustible objects. Maintain a 50cm safe space around the product.
- Do not mount this unit directly underneath a 13A socket
- Do not use this product with a cable reel or extension cord
- Care should be taken when fitting this product
- Only to be installed by a qualified person to the applicable laws for that location.

USAGE INSTRUCTIONS

It is recommended that for long term use this item is permanently installed by way of a switched fused spur. This should only be undertaken by a competent and qualified electrician.

- 1. Undertake a sight survey of the area where you wish to install the product. Make sure the wall and the fixings you use for the bracket are suitable for each other.
- 2. Mount the unit in a horizontal fashion to the surface (see fig. 1)
- 3. Connect to the mains supply and switch on.

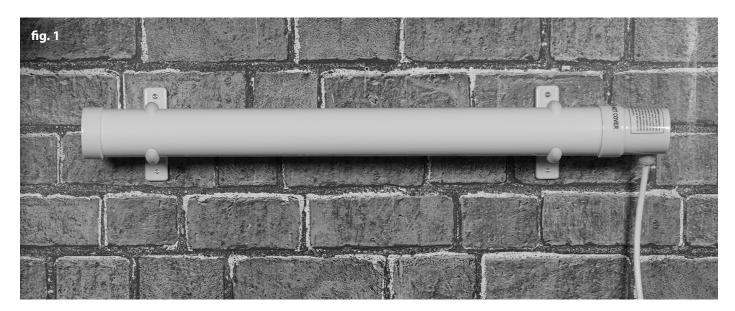

MAINTENANCE AND CLEANING

There are no user serviceable parts in this product. Any maintained must be carried out by a qualified and approved supplier.

- The item must be switched off and discounted from the mains before cleaning
- Clean on with a slightly damp cloth.
- Dust and debris can be removed using a soft bristle brush

SPECIFICATIONS

Model no	Power (W)	Voltage	IP Rating	Dims (mm)	Weight (kg)
EH1711	45	230	55	510x100x103	14.2
EH1713	80	230	55	710x100x103	13.9
EH1715	135	230	55	1050x100x103	13.8
EH1717	180	230	55	1500x100x103	18.2