



**OUTDOOR USE ONLY**



**Extra Flexible Expandable  
Garden Hose Pipe With 7  
Function Spray Nozzle and  
Tap Adaptor**

GH704 .....7.5m Length  
GH705 .....10m Length  
GH706 .....15m Length  
GH707 .....30m Length



**Instruction Manual**

This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or moved on then the manual must be included.

## SAFETY

Please read these instructions carefully before use.

This product and its accessories must be checked for any signs of damage. If any is detected then do not use and contact your supplier.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Do not drink from this hose
- Do not use to supply drinking water
- For outdoor use only
- Do not expand or stretch the hose when empty
- Make sure the unit is empty of water and dry before storing
- Periodically check this product for any signs of damage. If any damage is detected stop using it immediately and consult your supplier.
- Do not leave this product unattended when in use.
- Not designed for permanent connection to the mains

## INSTRUCTIONS OF USE

Before attempting to make any connections make sure the outdoor tap is turned off

1. Attach the tap adaptor to the outdoor tap
2. Attach the hose pipe end to the adaptor
3. Attach the spray head to the other end of the hose
4. Make sure the spray head is turned off
5. Turn the water on at the tap
6. Select the spray type required (see table on next page) and pull back the trigger

The spray head features a Hold Open Latch, designed to hold the trigger in the open position, allowing water to flow continuously until the latch is released. Depress the trigger and flick the latch to engage (see fig.1)

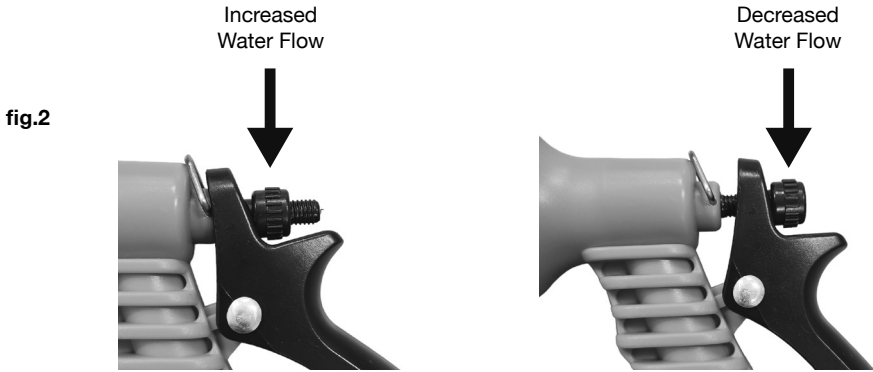


fig.1



**INSTRUCTIONS OF USE (CONTINUED)**

The hose features an adjustable flow valve, to adjust the flow of water produced. By tightening or loosening the flow screw you can regulate the amount of water passing through the spray head (see fig. 2)



**SPRAY PATTERNS**

| Wording | Spray Pattern  |
|---------|--|
| Jet     | Produces a strong, concentrated stream of water, ideal for reaching distant or high-up plants, cleaning stubborn dirt, or clearing debris.   |
| Shower  | Produces a gentle, widespread spray pattern resembling rainfall. It's suitable for watering delicate plants, seedlings, or for providing a light mist to cool down plants or humidify the air. |
| Flat    | Produces a wide, flat spray pattern, covering a large area evenly. It's useful for watering lawns, flowerbeds, or washing surfaces such as vehicles, driveways, or windows.                    |
| Cone    | Produces a circular spray pattern, useful for watering specific areas like potted plants or shrubs. It provides gentle coverage without disturbing the soil too much.                          |
| Full    | Produces a gentle, continuous stream, soaking the soil deeply. It's suitable for watering deeply rooted plants or for delivering consistent moisture to garden beds or vegetable patches.      |
| Centre  | Produces a focused vertical stream of water, useful for watering plants with thick foliage or reaching the base of tall plants without splashing water everywhere.                             |
| Mist    | Produces a gentle spray pattern, suitable for watering delicate plants or providing a light mist to indoor plants.   |

**MAINTENANCE AND CLEANING**

There are no user serviceable parts in this product. Any maintained must be carried out by a qualified and approved supplier.

- The item must be switched off and disconnected from the water supply before cleaning
- Clean only with a slightly damp cloth.
- Dust and debris can be removed using a soft bristle brush

