



FX1012 (NS800a4.5VDCT040)

Fxlab Set of 5 Acrylic Ghost Lights 40 White LED
Outdoor Battery Decoration with Timer



CE UK CA ~~IP~~ IP44

User Manual

Please Retain for Future
Reference

This file is available to view and download as a PDF at www.electrovision.co.uk. Sight impaired customers can use a free PDF Reader (such as adobe.com/reader) to zoom in and increase the text size for improved readability.

This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or moved on then the manual must be included. Please read these instructions carefully before use

Before use inspect the product and its battery pack for signs of damage. If any is tested do not use it and consult your supplier

- This unit can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved
- Children shall not play with the unit.
- For Domestic Use Only.
- Periodically check this product for any signs of damage. If any damage is detected stop using it immediately and consult your supplier.
- Do not allow the battery pack to come into direct contact with water or moisture
- There are no user serviceable parts in this product.
- For decorative purposes only
- Do not fix in place using cable clips or similar. This can cause damage to the product
- **Trip hazard:** Make sure the product is placed in a safe place so that it is not a trip hazard

OPERATION

- Open the battery compartment and insert 3 x AA Batteries
- Close the battery compartment making sure the rubber seal is correctly in place. This helps to keep moisture out of the battery compartment
- Using the push button on the front of the battery compartment select the mode/function required

TIMER

- This unit has a timer that will keep the light on for 6 hours and off for 18 hours.
- Press the button on the battery compartment once to enter timer mode, the light will automatically turn off after 6 hours and back on after 18 hours
 - Press the button twice for 'always on' mode
 - Press the button a third time and the lights will go off

MAINTENANCE

 
- At the end of the season remove all batteries
- Make sure the product is dry and free from dirt and grime.
- Store in a cool dry place away from direct sunlight
- Clean only with a slightly damp cloth

SPECIFICATIONS

Batteries	3 x AA (not supplied)
Size	3500x145x70mm
Material	Plastic
Placement	Outdoor/Indoor
LED Type	Standard LED
LED Qty	40
LED Colour	White
Control Type	On/Off and Timer



Name: Electrovision Ltd.
Address: Lancots Lane, Sutton Oak, St. Helens, WA9 3EX
Tel: 01744 745 000
E-mail: sales@electrovision.co.uk



Name: Aidapt B.V.
Address: Algolweg 22, Amersfoort, 3821BH, NL
Tel: +31 0332779210
E-mail: nederland@aidapt.eu