



FX1036 (NS800a4.5VDCT045)

Fxlab Foldable Pumpkin 45 LED Outdoor Battery
Decoration with 50cm Cable Timer



Name: Electrovision Ltd.

Address: Lancots Lane, Sutton Oak,
St. Helens, WA9 3EX

Tel: 01744 745 000

E-mail: sales@electrovision.co.uk



Name: Aidapt B.V.

Address: Algolweg 22,
Amersfoort, 3821BH, NL

Tel: +31 0332779210

E-mail: nederland@aidapt.eu



User Manual

Please Retain for Future Reference

This file is available to view and
download as a PDF at
www.electrovision.co.uk. Sight impaired
customers can use a free PDF Reader
(such as adobe.com/reader) to zoom in
and increase the text size for improved
readability.

This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or moved on then the manual must be included. Please read these instructions carefully before use

Before use inspect the product and its battery pack for signs of damage. If any is tested do not use it and consult your supplier

- This unit can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved
- Children shall not play with the unit.
- For Domestic Use Only.
- Periodically check this product for any signs of damage. If any damage is detected stop using it immediately and consult your supplier.
- Do not allow the battery pack to come into direct contact with water or moisture
- There are no user serviceable parts in this product.
- For decorative purposes only
- Do not fix in place using cable clips or similar. This can cause damage to the product
- **Trip hazard:** Make sure the product is placed in a safe place so that it is not a trip hazard



ASSEMBLY

- There are 2 centre poles, one WITH a hook, and one WITHOUT
- Insert the pole WITHOUT the hook into the pumpkin body
- Attach the pole WITH the hook to the first pole, and pass the narrow end through the centre hoop at the base of the pumpkin body
- Insert the centre pole into the spigot in the circular base
- Stretch the elastic down and around the hook on the circular base, this will keep the product taut
- The battery compartment can be hooked over the hook on the centre pole to keep it hidden

OPERATION

- Open the battery compartment and insert 3 x AA Batteries
- Close the battery compartment making sure the rubber seal is correctly in place. This helps to keep moisture out of the battery compartment
- Using the push button on the front of the battery compartment select the mode/function required

TIMER

This unit has a timer that will keep the light on for 6 hours and off for 18 hours.

- Press the button on the battery compartment once to enter timer mode, the light will automatically turn off after 6 hours and back on after 18 hours
- Press the button twice for 'always on' mode
- Press the button a third time and the lights will go off

MAINTENANCE

- At the end of the season remove all batteries
- Make sure the product is dry and free from dirt and grime.
- Store in a cool dry place away from direct sunlight
- Clean only with a slightly damp cloth

SPECIFICATIONS

Batteries	3 x AA (not supplied)
Size	800x350x350mm
Material	Metal and Fabric
Placement	Outdoor/Indoor
LED Type	Standard LED
LED Qty	45
LED Colour	Warm White
Control Type	On/Off and Timer