



Fxlab Multicolour Micro LED Metal Outdoor
Halloween Decoration with Timer



FX1050 (NS260ZT-0399-2)

Spider



FX1051 (NS260ZT-0274-2)

Spider



FX1052 (NS260ZT-0279-2)

Witch

**LIGHTING
CHAIN**



IP44

**CAN BE USED
INDOORS OR OUTDOORS**

**POWER SUPPLY
& CONNECTOR**



IP20

**CAN ONLY BE
USED INDOORS**

User Manual

Please Retain for Future Reference

This file is available to view and download as a PDF at www.electrovision.co.uk. Sight impaired customers can use a free PDF Reader (such as adobe.com/reader) to zoom in and increase the text size for improved readability.

This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or moved on then the manual must be included.

SAFETY

Please read these instructions carefully before use.

Check this product, its power supply, lead and all connections for any signs of damage or wear before use. If any is detected then do not use and contact your supplier

- This unit can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.
- Children shall not play with the unit.
- **The lighting chain can be used outdoors, however, the transformer (power supply) MUST remain indoors at all times.**
- Do not use the power supply in locations where paint, petrol or other flammable liquids are used or stored.
- Please ensure the unit is switched off and unplugged when not in use.
- For Domestic Use Only.
- Periodically check this product and its power supply (transformer) for any signs of damage. If any damage is detected stop using it immediately and consult your supplier.
- Only use the power supply provided with this product. Replacement should be requested using the information below
- Do not leave this product unattended when in use.
- This unit must be positioned on a flat stable surface for floor mounting product or hung from a substantial bracket or hook for suspended items
- There are no user serviceable parts in this product.
- Do not move or knock this product while in use.
- Do Not Cover or restrict the airflow around the transformer (power supply)
- Do not connect this product while it is still in its packaging.
- Do not allow any part of this product to come into contact with direct heat or a naked flame. RISK OF FIRE.
- Do not use the power supply in damp or wet locations.
- For decorative purposes only
- Keep away from animals and children - trip and strangulation hazard
- Make sure all connections are finger tight and secure in place before use.
- This product is not designed for permanent installation

**DO NOT USE ANY OTHER POWER SUPPLY OTHER THAN THE ONE PROVIDED WITH THIS UNIT.
DO NOT USE THIS POWER SUPPLY FOR ANY OTHER PURPOSE THAN TO POWER THIS UNIT.**

ALL CONNECTIONS ON THIS PRODUCT ARE FITTED WITH A RUBBER OLIVE (LOOKS LIKE A WASHER). THE PURPOSE OF THESE OLIVES IS TO MAKE A WATER RESISTANT SEAL. IT IS IMPORTANT THAT THESE ARE KEPT IN PLACE AT ALL TIMES AND THAT THE CONNECT IF FIRMLY IN PLACE. FAILURE TO DO THIS CAN LEAD TO INGRESS OF WATER WHICH CAN DAMAGE THE PRODUCT AND LEADS TO A RISK OF FIRE. AT THE END OF THE SEASON WHEN THE PRODUCT IS DISASSEMBLED CHECK THE OLIVES ARE STILL IN PLACE BEFORE STORAGE

- **NOTE:** Do not switch this unit on until the unit is assembled and is correctly positioned
- Construction and installation of this product should only be undertaken by a competent person after surveying the site to make sure it is suitable
- To prevent damage take down in windy or very cold conditions
- Make sure the product is stable and upright or securely suspended before use.
- Secure the product in place with pegs, ties or sandbags if necessary for surface products
- Any use of ladders should only be undertaken by a competent person
- Make sure any trailing leads are secured in place and are not a trip hazard

TIMER

This unit has a timer that will keep the light on for 6 hours and off for 18 hours.

- Press the button on the plug once to enter timer mode, the light will automatically turn off after 6 hours and back on after 18 hours
- Press the button twice for 'always on' mode
- Press the button a third time and the lights will go off

MAINTENANCE AND STORAGE

 
- Disconnect from the mains before disassembling this product
- Make sure the product is dry and free from dirt and grime before storage
- Store in a cool dry place away from direct sunlight
- Clean only with a slightly damp cloth
- Do not use any strong detergents or cleaning agents

SPECIFICATIONS

	FX1050	FX1051	FX1052
Size	760x700x100mm	545x35x610mm	880x870x100mm
No LEDs	399	274	322
Type of LED	Micro LED	Micro LED	Micro LED
LED Colour	Multi-Coloured	Multi-Coloured	Multi-Coloured
LED Life Expectancy	5000	5000	5000
Power Supply Code	GP-SW050DC1000T(UK)	GP-SW045DC0800T(UK)	GP-SW050DC1000T(UK)
Input Voltage	5V	4.5V	5V
Input Current	1000mA	800mA	1000mA
Input Watts	5W	3.6W	5W
Transformer Type	BS IP20	BS IP20	BS IP20
Placement	Indoor/Outdoor	Indoor/Outdoor	Indoor/Outdoor
Material	Metal	Metal	Metal



Name: Electrovision Ltd.
Address: Lancots Lane, Sutton Oak,
St. Helens, WA9 3EX
Tel: 01744 745 000
E-mail: sales@electrovision.co.uk



Name: Aidapt B.V.
Address: Algolweg 22, Amersfoort,
3821BH, NL
Tel: +31 0332779210
E-mail: nederland@aidapt.eu